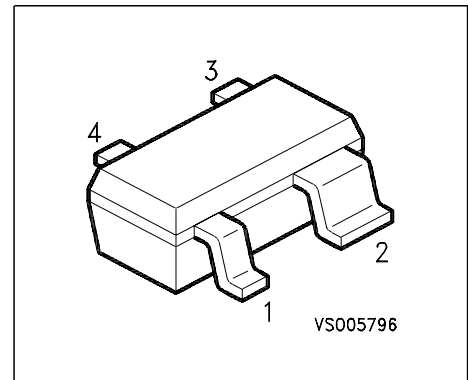**NPN Silicon RF Transistor**

- For low noise, high-gain broadband amplifiers at collector currents from 1 mA to 20 mA

- f_T = 8 GHz
  F = 1.2 dB at 900 MHz

VS005796

ESD: **E**lectro**s**tatic **d**ischarge sensitive device, observe handling precaution!

Type	Marking	Pin Configuration				Package
BFP 182R	RG^s	1 = E	2 = C	3 = E	4 = B	SOT-143R

Maximum Ratings

Parameter	Symbol	Value	Unit
Collector-emitter voltage	V_{CEO}	12	V
Collector-emitter voltage	V_{CES}	20	
Collector-base voltage	V_{CBO}	20	
Emitter-base voltage	V_{EBO}	2	
Collector current	I_C	35	mA
Base current	I_B	4	
Total power dissipation, $T_S \leq 69\ °C$ [1]	P_{tot}	250	mW
Junction temperature	T_j	150	°C
Ambient temperature	T_A	-65 ... 150	
Storage temperature	T_{stg}	-65 ... 150	

Thermal Resistance

Junction - soldering point	R_{thJS}	≤ 325	K/W

[1] T_S is measured on the collector lead at the soldering point to the pcb

Oct-12-1999

Electrical Characteristics at T_A = 25°C, unless otherwise specified.

Parameter	Symbol	Values			Unit
		min.	typ.	max.	
DC characteristics					
Collector-emitter breakdown voltage I_C = 1 mA, I_B = 0	$V_{(BR)CEO}$	12	-	-	V
Collector-emitter cutoff current V_{CE} = 20 V, V_{BE} = 0	I_{CES}	-	-	100	µA
Collector-base cutoff current V_{CB} = 10 V, I_E = 0	I_{CBO}	-	-	100	nA
Emitter-base cutoff current V_{EB} = 1 V, I_C = 0	I_{EBO}	-	-	1	µA
DC current gain I_C = 10 mA, V_{CE} = 8 V	h_{FE}	50	100	200	-

Oct-12-1999

Electrical Characteristics at T_A = 25°C, unless otherwise specified.

Parameter	Symbol	Values			Unit
		min.	typ.	max.	
AC characteristics (verified by random sampling)					
Transition frequency I_C = 15 mA, V_{CE} = 8 V, f = 500 MHz	f_T	6	8	-	GHz
Collector-base capacitance V_{CB} = 10 V, f = 1 MHz	C_{cb}	-	0.27	0.45	pF
Collector-emitter capacitance V_{CE} = 10 V, f = 1 MHz	C_{ce}	-	0.27	-	
Emitter-base capacitance V_{EB} = 0.5 V, f = 1 MHz	C_{eb}	-	0.6	-	
Noise figure I_C = 3 mA, V_{CE} = 8 V, Z_S = Z_{Sopt} , f = 900 MHz f = 1.8 GHz	F	 - -	 1.2 1.9	 - -	dB
Power gain, maximum stable [1] I_C = 10 mA, V_{CE} = 8 V, Z_S = Z_{Sopt}, Z_L = Z_{Lopt} , f = 900 MHz	G_{ms}	-	21.5	-	
Power gain, maximum available [2] I_C = 10 mA, V_{CE} = 8 V, Z_S = Z_{Sopt}, Z_L = Z_{Lopt} , f = 1.8 GHz	G_{ma}	-	15	-	
Transducer gain I_C = 10 mA, V_{CE} = 8 V, Z_S = Z_L = 50Ω , f = 900 MHz f = 1.8 GHz	$|S_{21e}|^2$	 - -	 17 11	 - -	

[1] $G_{ms} = |S_{21} / S_{12}|$
[2] $G_{ma} = |S_{21} / S_{12}| (k-(k^2-1)^{1/2})$

SPICE Parameters (Gummel-Poon Model, Berkley-SPICE 2G.6 Syntax) :

Transistor Chip Data

IS =	4.8499	fA	BF =	84.113	-	NF =	0.56639	-
VAF =	21.742	V	IKF =	0.14414	A	ISE =	8.4254	fA
NE =	0.91624	-	BR =	10.004	-	NR =	0.54818	-
VAR =	2.2595	V	IKR =	0.039478	A	ISC =	5.9438	fA
NC =	0.5641	-	RB =	2.8263	Ω	IRB =	0.071955	mA
RBM =	3.4217	Ω	RE =	2.1858		RC =	1.8159	Ω
CJE =	8.8619	fF	VJE =	1.0378	V	MJE =	0.40796	-
TF =	22.72	ps	XTF =	0.43147	-	VTF =	0.34608	V
ITF =	6.5523	mA	PTF =	0	deg	CJC =	490.25	fF
VJC =	1.0132	V	MJC =	0.31068	-	XCJC =	0.19281	-
TR =	1.7541	ns	CJS =	0	fF	VJS =	0.75	V
MJS =	0	-	XTB =	0	-	EG =	1.11	eV
XTI =	3	-	FC =	0.64175	-	TNOM	300	K

All parameters are ready to use, no scalling is necessary.
Extracted on behalf of SIEMENS Small Signal Semiconductors by:
Institut für Mobil-und Satellitentechnik (IMST)
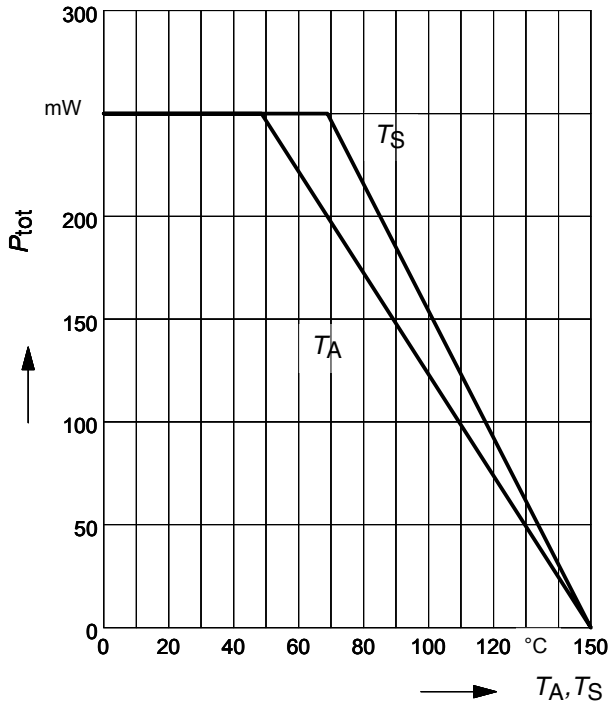© 1996 SIEMENS AG

Package Equivalent Circuit:

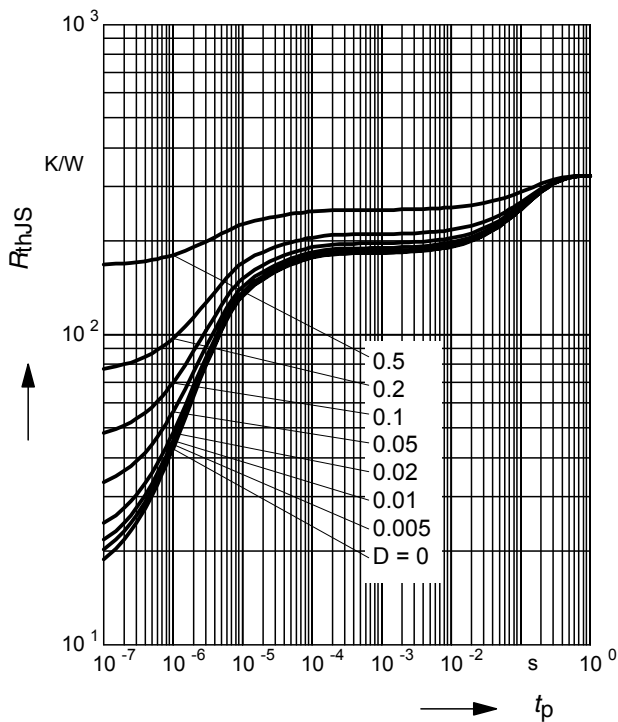|		
L_{BI} =	0.89	nH
L_{BO} =	0.73	nH
L_{EI} =	0.4	nH
L_{EO} =	0.15	nH
L_{CI} =	0	nH
L_{CO} =	0.42	nH
C_{BE} =	189	fF
C_{CB} =	15	fF
C_{CE} =	187	fF

Valid up to 6GHz

For examples and ready to use parameters please contact your local Infineon Technologies distributor or sales office to obtain a Infineon Technologies CD-ROM or see Internet:http://www.infineon.com/products/discrete/index.htm

Total power dissipation $P_{tot} = f(T_A{}^*, T_S)$

* Package mounted on epoxy

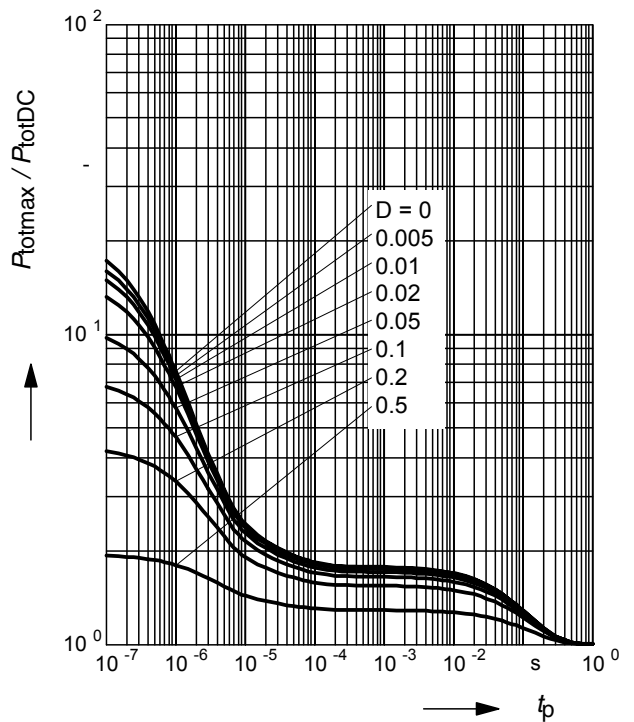## Permissible Pulse Load $R_{thJS} = f(t_p)$

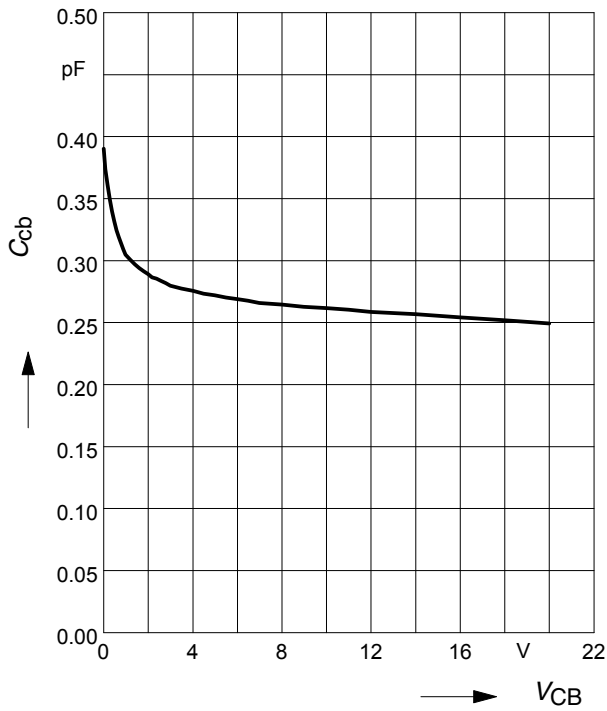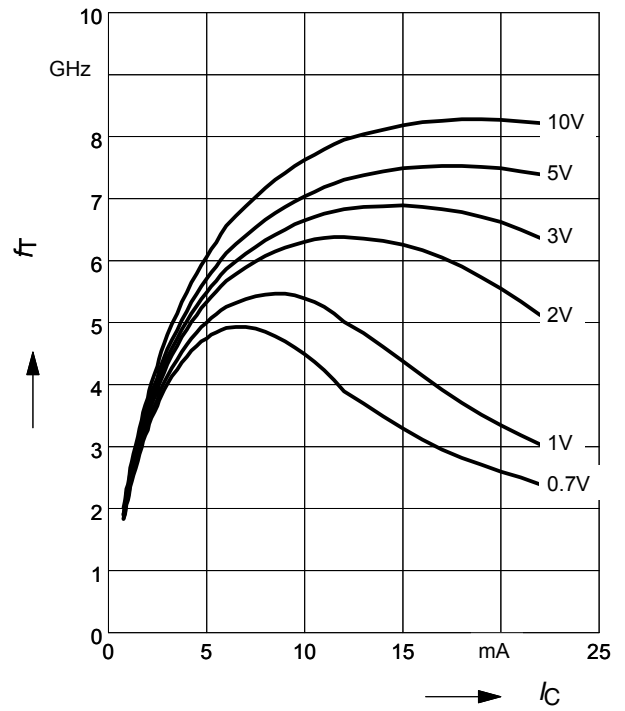## Permissible Pulse Load
$P_{totmax}/P_{totDC} = f(t_p)$

5   Oct-12-1999

Collector-base capacitance $C_{cb} = f(V_{CB})$
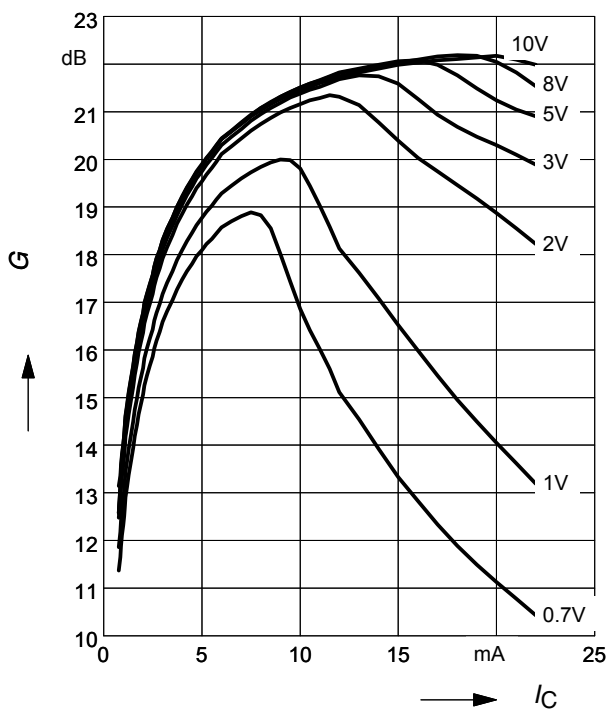
$f = 1\text{MHz}$

Transition frequency $f_T = f(I_C)$

V_{CE} = Parameter

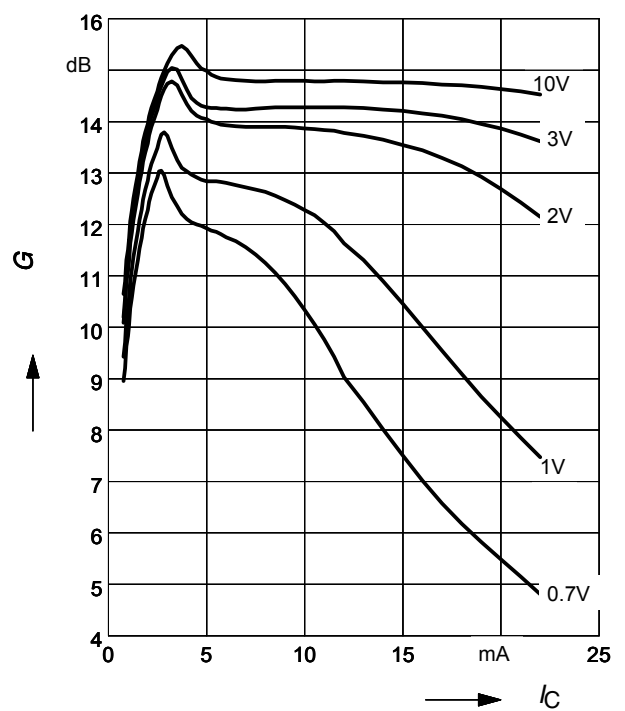**Power Gain** G_{ma}, $G_{ms} = f(I_C)$

$f = 0.9\text{GHz}$

V_{CE} = Parameter

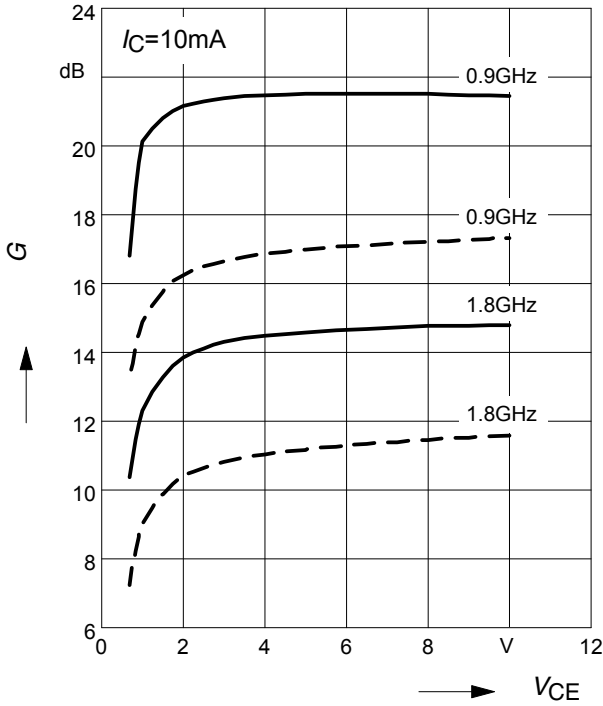**Power Gain** G_{ma}, $G_{ms} = f(I_C)$

$f = 1.8\text{GHz}$

V_{CE} = Parameter

Oct-12-1999

Power Gain G_{ma}, $G_{ms} = f(V_{CE})$:_____
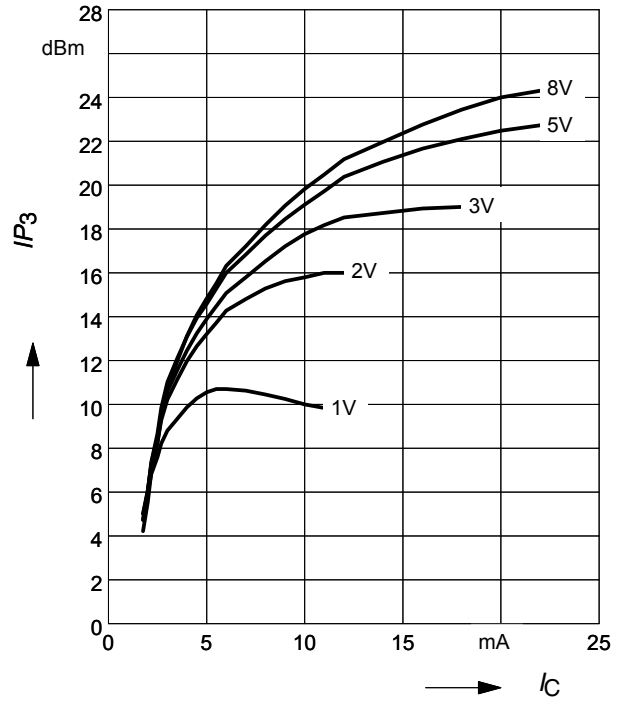### $|S_{21}|^2 = f(V_{CE})$:---------
f = Parameter

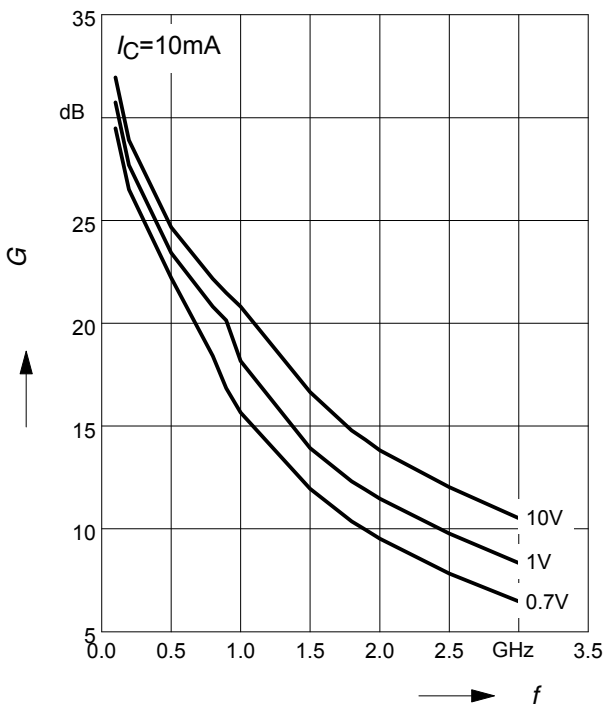## Intermodulation Intercept Point $IP_3 = f(I_C)$
(3rd order, Output, $Z_S = Z_L = 50\Omega$)

V_{CE} = Parameter, f = 900MHz

Power Gain G_{ma}, $G_{ms} = f(f)$

V_{CE} = Parameter

Power Gain $|S_{21}|^2 = f(f)$

V_{CE} = Parameter

Oct-12-1999